

Modern Diesel Technology

Brakes, Steering & Suspension Systems

Sean Bennett



We Support
ASE Program Certification
Through



Contents

Preface	xxi
Series Preface	xxiii
CHAPTER 1	
Introduction and Safety	1
Introduction	1
<i>Shake Hands with Danger!</i>	2
<i>A Healthy Lifestyle</i>	2
Personal Safety Equipment	2
<i>Safety Boots</i>	3
<i>Safety Glasses</i>	3
<i>Hearing Protection</i>	4
<i>Gloves</i>	4
<i>Back Care</i>	5
<i>Coveralls</i>	5
<i>Butane Lighters</i>	6
<i>Hair and Jewelry</i>	6
Fire Safety	6
<i>Fire Extinguishers</i>	6
Shop Equipment	7
<i>Lifting Devices</i>	7
General Shop Precautions	9
<i>Exhaust Extraction</i>	9
<i>Workplace Housekeeping</i>	9
<i>Components Under Tension</i>	9
<i>Compressed Fluids</i>	10
<i>Pneumatics Safety</i>	10
Chassis and Shop Electrical Safety	11
<i>Static Discharge</i>	11
<i>Chassis Wiring and Connectors</i>	12
<i>Mains Electrical Equipment</i>	13
Oxyacetylene Equipment	13
<i>Acetylene Cylinders</i>	13
<i>Oxygen Cylinders</i>	14
<i>Regulators and Gauges</i>	14
<i>Hoses and Fittings</i>	14
<i>Torches and Tips</i>	14
<i>Backfire</i>	15
<i>Flashback</i>	15
<i>Eye Protection</i>	15
<i>Oxyacetylene Precautions</i>	16

	<i>Adjustment of the Oxyacetylene Flame</i>	16
	<i>Electric Arc Welding</i>	16
	<i>Summary</i>	17
	<i>Review Questions</i>	17
CHAPTER 2	Fundamentals	21
	Introduction	21
	Fluid Power	22
	Pressure	22
	<i>Creating Pressure</i>	22
	<i>Atmospheric Pressure</i>	22
	<i>Force</i>	23
	<i>Head Pressure</i>	23
	<i>Vacuum</i>	23
	<i>Absolute Pressure</i>	24
	Hydraulic Levers	24
	<i>Flow</i>	25
	Pneumatics	27
	<i>Potential Energy in Pneumatic Circuits</i>	28
	<i>Non-Brake Pneumatic Circuits</i>	28
	Online Tasks	28
	<i>Summary</i>	28
	<i>Review Questions</i>	29
CHAPTER 3	Air Brake Components	31
	Introduction	32
	Air Brakes—A Driver's Point of View	33
	Air Brake Sub-Systems	35
	The Air Supply Circuit	37
	Air Compressors	37
	<i>Compressor Operation</i>	38
	<i>Compressor Cycles</i>	38
	Governors	39
	<i>System Pressure</i>	41
	Air Dryer	41
	<i>Dryer Reservoir Module</i>	42
	<i>Trailer Air Dryers</i>	42
	Alcohol Evaporators	42
	Supply Tank	43
	<i>Moisture Ejectors</i>	45
	<i>Other Supply Circuit Valves</i>	45
	Low-Pressure Indicator	45
	<i>Air Tank Volume</i>	46
	Primary Circuit	46
	<i>Primary Tank</i>	46
	<i>Role of the Foot Valve in the Primary Circuit</i>	47
	<i>Brake Valves in the Primary Circuit</i>	47
	<i>Trailer Primary Circuit Brake Signal</i>	47
	Secondary Circuit	48
	<i>Secondary Tank</i>	48
	<i>Role of the Foot Valve in the Secondary Circuit</i>	48

<i>Brake Valves in the Secondary Circuit</i>	48
<i>Trailer Secondary Circuit Brake Signal</i>	49
Dash Control and the Parking/Emergency Circuit	49
Spring Brakes	49
Dash Control Valves	51
<i>System Park</i>	51
<i>Trailer Supply</i>	52
<i>Tractor Park</i>	52
Trailer Circuit	52
Trailer Air Supply	53
Trailer Service Signal	53
Hoses	53
<i>Trailer Supply Hose</i>	54
<i>Trailer Service Signal Hose</i>	54
Gladhands	54
<i>Polarized Gladhands</i>	54
<i>Quick-Release Gladhands</i>	54
<i>Dummy Gladhands</i>	54
Trailer Spring and Service Priority Systems	54
Trailer Brake Valves	55
<i>Park-on-Air</i>	55
<i>Park-on-Spring</i>	55
<i>Relay-Emergency Valves</i>	55
<i>Trailer Service Brakes</i>	56
Foundation Brakes	56
S-Cam Foundation Brakes	56
<i>S-Camshafts</i>	57
<i>Spiders</i>	57
<i>Brake Shoes</i>	57
<i>Edge Codes</i>	58
<i>Brake Drums</i>	59
<i>S-Cam Foundation Brake Hardware</i>	59
Wedge Brake Systems	59
Air Disc Brakes	60
Air Brake System Components	61
Foot Valves	61
<i>Foot Valve Operation</i>	62
<i>Primary Circuit Application: Normal Operation</i>	63
<i>Secondary Circuit Application: Normal Operation</i>	63
<i>Releasing Brakes</i>	63
Circuit Failures	63
<i>Primary Circuit Failure</i>	63
<i>Secondary Circuit Failure</i>	63
Trailer Application Valve	64
Relay Valves	64
<i>Relay Valve Operation</i>	64
<i>Relay Valve Crack Pressures</i>	65
Quick-Release Valves	66
Ratio Valves	66
Inversion Valves	67
Bobtail Proportioning Valves	67
Spring Brake Control Valve	68

Tractor Protection Valves	68
Check Valves	70
<i>One-Way Check Valve</i>	70
<i>Two-Way Check Valves</i>	70
Stop Lamp Switches	71
Brake Chambers	71
<i>Brake Chamber Stroke</i>	72
<i>Brake Chamber Size</i>	72
<i>Spring Brake Chambers</i>	72
<i>Caging Spring Brakes</i>	73
<i>Rotochambers</i>	75
<i>Long-Stroke Chambers</i>	75
<i>Double Diaphragm 3 Safety Actuator</i>	75
Slack Adjusters	76
<i>Manual Slack Adjusters</i>	76
<i>Stroke-Sensing Automatic Slack Adjusters</i>	76
<i>Clearance-Sensing Automatic Slack Adjusters</i>	77
Gauges	78
Brake System Balance	78
Brake Imbalance Terms	80
<i>Consequences of Brake Imbalance</i>	80
Mechanics of S-Cam, Disc, and Wedge Brakes	81
<i>FMVSS 121 Requirements</i>	81
<i>Summary</i>	81
<i>Review Questions</i>	82

CHAPTER 4	Hydraulic Brakes and Air-Over-Hydraulic Brake Systems	85
	Introduction	86
	Hydraulic Brake System Components	86
	Hydraulic Brake Fluid	86
	Master Cylinders	87
	<i>Hydraulic Power Boosters</i>	88
	<i>Pressure Differential Valve</i>	91
	<i>Metering Valves</i>	91
	<i>Proportioning Valves</i>	92
	<i>Combination Valves</i>	92
	Hydraulic Drum Brakes	92
	<i>Wheel Cylinders</i>	92
	<i>Drum Brakes</i>	93
	<i>Non-Servo Drum Brakes</i>	93
	<i>Servo-Type Drum Brakes</i>	94
	Air-Over-Hydraulic Brake Systems	94
	Hydraulic Brake Service Procedures	96
	Heavy-Duty Brake Fluid	97
	Changing Brake Fluid	98
	Servicing a Master Cylinder	98
	<i>Cast Iron</i>	98
	<i>Aluminum Bore</i>	99
	<i>Overhauling a Master Cylinder</i>	99
	Metering Valve Service	99
	Pressure Differential Valves	100

Proportioning Valve	100
Wheel Cylinders	100
<i>Removing and Installing a Wheel Cylinder</i>	100
<i>Disassembly and Reassembly of a Wheel Cylinder</i>	100
Servicing Brake Drums	100
<i>Drum Removal and Inspection</i>	100
Disc Brake Removal	102
<i>Removing and Installing Brake Pads</i>	102
Inspecting Rotors	103
Brake Lines and Hoses	104
Bleeding Brakes	104
<i>Manual Bleeding</i>	104
<i>Pressure Bleeding Brakes</i>	105
<i>Bleeding an Air-Over-Hydraulic System</i>	106
Hydraulic ABS	108
ABS Configurations	108
<i>Integrated and Nonintegrated Systems</i>	108
ABS Components	108
<i>Wheel Speed Sensors</i>	109
<i>Other ABS Inputs</i>	109
<i>ECU</i>	109
<i>Modulator Assembly</i>	109
<i>Other ABS Outputs</i>	110
ABS Operation	110
<i>Summary</i>	111
<i>Review Questions</i>	111

CHAPTER 5	Antilock Brake Systems	115
	Introduction	115
	Basics of ABS Operation	117
	Split-Coefficient Stops	117
	ABS Failures and Diagnosis	117
	Types of ABS	117
	ABS Components	118
	Input Circuit Components	118
	<i>Wheel and Axle Speed Sensors</i>	118
	ECU	119
	<i>ABS Control Logic</i>	120
	Output Circuit Components	121
	<i>Brake Modulators or ABS Valves</i>	121
	<i>Dash Warning Indicator Light</i>	122
	<i>Automatic Traction Control Indicator Light</i>	123
	<i>Connectors and Wiring</i>	123
	<i>Power Line Carrier</i>	123
	ABS Configurations	124
	Six-Channel System	125
	Six/Four Channel System	126
	Four-Channel System	126
	Two-Channel System	126
	ATC Systems	127
	Trailer ABS	127

ABS Diagnostics	130
<i>LED Indicators</i>	130
<i>Blink Codes</i>	131
Diagnosing Trailer ABS	131
<i>ESTs</i>	131
Troubleshooting Bendix ABS	132
<i>Remote Diagnostic Unit (RDU)</i>	132
<i>ProLink EST</i>	132
<i>Bendix ACom Software</i>	132
ABS Service Procedure	132
Tire Size Range	132
ABS Voltage Check	133
Location of Sensors	133
Code Interpretation	133
<i>Haldex Codes</i>	133
<i>Sensor Adjustment</i>	134
<i>Sensor Signal (Output) Voltage Test</i>	134
<i>Sensor Resistance</i>	135
<i>Dynamometer Testing Vehicles with ATC</i>	135
<i>Testing an ABS Modulator Valve</i>	136
<i>ATC Valve</i>	136
<i>Front Axle Wheel Speed Sensor Installation</i>	136
<i>Rear Axle Wheel Speed Sensor Installation</i>	136
ABS Add-Ons	136
Tracking and Stability Factors	137
Stability Management	137
<i>Steering Angle Sensors</i>	138
<i>Brake Demand Sensors</i>	138
<i>Operating Strategies</i>	138
Electronic Braking Systems (EBS)	139
<i>EBS Advantage</i>	139
EBS Operation	140
<i>Summary</i>	140
<i>Review Questions</i>	141

CHAPTER 6	Air Brake Servicing	145
	Introduction	145
	Maintenance and Safety	146
	Air Brake Safety Considerations	146
	General Maintenance	146
	<i>Pneumatic Factors</i>	146
	<i>Brake Torque Balance</i>	147
	<i>Draining Air Tanks</i>	149
	Test Equipment	150
	Assessing Brake System Performance	151
	<i>Test 1. Governor Cut-Out, Low-Pressure Warning, and Pressure Buildup Test</i>	152
	<i>Test 2. Reservoir Air Supply Leakage Test</i>	153
	<i>Test 3. Manual Parking/Emergency System Test</i>	153
	<i>Straight Trucks and Tractors</i>	153
	<i>Tractor/Trailer Combinations</i>	153
	<i>Test 4. Automatic Emergency System Test</i>	155
	<i>Test 5. Air Brake System Operational Checks</i>	156

Supply Circuit Service	157
Air Compressor Service	157
<i>Compressor Troubleshooting</i>	158
Air Dryer Service	158
<i>Air Dryer Operation and Leakage Tests</i>	162
<i>Compliance Issues Related to the Supply System</i>	162
<i>Out-of-Service Conditions of the Air Supply System</i>	164
<i>Other Compliance Requirements</i>	164
Service Application Circuit	164
Air Brake Foot Valve Preventive Maintenance	164
Performance Checks for Foot Valves	165
<i>Function Check</i>	165
<i>Leakage Test</i>	165
<i>Removal of a Foot Valve</i>	166
Preventive Maintenance of Relay Valves	166
<i>Operational and Leakage Test</i>	166
<i>Removal of a Relay Valve</i>	167
Troubleshooting Relay Valves/Service Applications	167
<i>Complaint: Leaks</i>	167
<i>Complaint: Brakes Won't Apply/Release</i>	168
<i>Complaint: Slow Application/Release</i>	168
<i>Trailer Application Valves</i>	168
<i>Quick-Release Valves</i>	168
<i>Tractor Protection Valve</i>	169
Compliance Issues Related to the Service Brake System	169
<i>OOS Conditions of the Service Brake System</i>	170
Parking/Emergency Circuit	170
Compliance Issues Related to the Parking/Emergency Brake System	171
<i>OOS Conditions of the Parking/Emergency Brake System</i>	171
<i>Caging a Spring Brake</i>	171
<i>Service Diaphragm Replacement</i>	171
<i>Changing Position of Mounting Bolts, Clamps, and Air Ports</i>	173
<i>Spring Brake Removal</i>	173
<i>Disarming Spring Brakes</i>	174
<i>Spring Brake Installation</i>	174
Slack Adjusters	177
Installation of Slack Adjusters	177
<i>Installation Preparation</i>	177
<i>Clevis Installation and Adjustment</i>	178
<i>Installing the Adjuster</i>	179
Trailer Brake System	180
Compliance Issues Related to the Trailer Brake System	180
<i>OOS Conditions of the Trailer Brake System</i>	180
<i>Air System Valve Troubleshooting Guide</i>	180
Foundation Brake Service	180
Disassembly and Reassembly of S-Cam Foundation Brake Assemblies	180
<i>Prepare an S-Cam Foundation Brake for Reassembly</i>	182
<i>Inspect Components</i>	182
<i>Linings</i>	184
<i>Reassembly of an S-Cam Foundation Brake</i>	185
<i>Install the S-Camshaft</i>	185
<i>Installing Manual Slack Adjusters</i>	185

<i>Installing Automatic Slack Adjusters</i>	186
<i>Installing Brake Shoes</i>	186
Brake Adjustment	187
<i>Check Freestroke</i>	187
Alternate Brake Adjustment Inspection Methods	189
<i>Visual Stroke Indicators</i>	189
<i>Wheel-Down, Wheel-Up, Brake Adjustment</i>	189
General Brake Valve Troubleshooting	189
<i>Complaint: Air Leaks</i>	192
<i>Complaint: Oversensitive Service Brakes</i>	192
<i>Complaint: Brakes Will Not Fully Apply</i>	193
<i>Complaint: Brakes Fail to Release Completely</i>	193
Service Procedures on Air Disc Brakes	193
<i>Checking Lining Wear</i>	193
<i>Lubricating Calipers</i>	194
<i>Measuring Rotors</i>	194
<i>Adjusting Air Disc Brakes</i>	194
Servicing Wedge Brakes	194
Brake Adjustment	194
Brake Certification, Inspection, and Testing	197
Certification	197
Inspection and Testing	197
<i>Roller Brake Dynamometers</i>	197
<i>Plate-Type Brake Testers</i>	198
<i>Summary</i>	199
<i>Review Questions</i>	199

CHAPTER 7	Steering and Alignment	203
	Introduction	203
	Steering System Components	204
	Steering Wheel	204
	Steering Column	204
	Steering Gear	205
	Pitman Arm	206
	Drag Link	206
	Steering Control Arm	206
	Steering Knuckle	207
	Ball Joints	208
	Ackerman Arm	208
	Tie-Rod Assembly	208
	Front-End Alignment	209
	<i>Toe</i>	209
	<i>Camber</i>	210
	<i>Measuring Toe</i>	210
	<i>Adjusting Toe Angle</i>	210
	<i>Deep Drop Tie-Rod Ends</i>	210
	Caster	211
	<i>Recommended Caster Settings</i>	211
	<i>Measuring Caster</i>	212
	<i>Twisted Axles</i>	214
	Camber	215
	<i>Measuring Camber</i>	216

<i>Kingpin Inclination</i>	216
<i>Turning Angle or Radius</i>	217
<i>Driving Front Axles</i>	217
Ackerman Geometry	217
Axle Alignment	219
<i>Trailer Tracking</i>	219
<i>Measurement</i>	220
<i>Axle Offset</i>	220
Electronic Alignment Systems	220
Beam Alignment Systems	220
<i>Trailer Axles</i>	221
Sensor and Computer Alignment Systems	222
Steering Axle Inspection	224
Inspection Procedure	224
Steering Axle Problem Diagnosis	225
<i>Steering Knuckle Inspections</i>	226
<i>Tie-Rod Inspection</i>	227
<i>Wheel Bearing Inspection</i>	227
<i>Adjusting Knuckle Vertical Play</i>	228
Steer Axle Repairs	230
<i>Preliminary Steps</i>	230
<i>Steering Knuckle Disassembly</i>	230
<i>Kingpin Removal</i>	230
<i>Cleaning</i>	230
<i>Kingpin Seal Replacement</i>	231
<i>Ackerman Arm Replacement</i>	231
<i>Tie-Rod End Replacement</i>	231
<i>Kingpin Bushing Replacement</i>	232
<i>Steering Knuckle Assembly</i>	232
Unitized Steer Axles	234
Manual Steering Gears	234
Worm and Sector Steering Gears	234
Recirculating Ball Gears	235
Manual Steering Gear Troubleshooting	235
<i>Worm and Sector Gearset</i>	235
<i>Worm Shaft Preloads</i>	236
<i>Measuring and Adjusting Preloads</i>	236
<i>Centering the Steering System</i>	239
Power-Assist Steering Systems	241
<i>Power Steering Pump</i>	241
<i>Pump Operation</i>	242
<i>Flow Control and Pressure Relief Valves</i>	242
<i>Power Steering Gears</i>	242
Hydraulic Operation	243
Troubleshooting Power Steering Systems	245
Troubleshooting Safety	245
Hydraulic Tests	245
<i>Test Procedure</i>	247
Air-Assist Steering Systems	248
System Components	248
<i>Torque Valve</i>	248
<i>Power Cylinder</i>	249

<i>Air Safety Valve</i>	249
Air-Assist Operation	249
Air-Assist System Maintenance	250
<i>Daily</i>	250
<i>Weekly</i>	250
<i>Every 25,000 Miles</i>	250
Troubleshooting	250
<i>Test Torque Valve</i>	250
<i>Test Power Cylinder</i>	251
Electronic and Load-Sensing Steering	251
Electronically Variable Steering	252
<i>EVS Pump Design</i>	252
<i>EVS Electronic Control Unit (ECU)</i>	252
Load-Sensing Power Steering	253
<i>Summary</i>	254
<i>Review Questions</i>	255

CHAPTER 8	Suspension Systems	259
	Introduction	259
	Leaf-Spring Suspensions	260
	Spring Pack Principles	260
	Spring Pack Self-Dampening	260
	Types of Leaf Spring Assemblies	261
	Constant Rate	261
	Variable Rate	262
	Applications	262
	Front Suspension	262
	<i>Rear Suspension-Single Axle</i>	263
	<i>Rear Suspension—Tandem Axle</i>	264
	<i>Bogie Suspensions</i>	264
	Spring Suspension with Shock Absorbers	264
	Spring Suspension with Torque Rods	265
	Equalizing Beam Suspensions	266
	Leaf Spring Equalizing Beam	266
	Fiber Composite Leaf Springs	266
	Solid Rubber Spring Equalizing Beam	267
	Torsion Bar Suspensions	268
	Air Spring Suspensions	268
	Air Suspension Components	269
	<i>Height Control Valve</i>	269
	<i>Regulator</i>	271
	<i>Air Springs</i>	271
	<i>Longitudinal and Transverse Forces</i>	272
	<i>Shock Absorbers</i>	272
	Servicing Mechanical Suspensions	272
	Periodic Maintenance Checks	272
	<i>Inspect the Spring and Bracket Bushings</i>	273
	System Diagnosis	273
	<i>Rough Ride Diagnosis</i>	274
	Leaf Spring Replacement	274
	<i>Remove the Spring Pack</i>	275
	<i>Install a Spring Pack</i>	275

<i>Maintenance</i>	275
<i>Shock Absorber Inspection</i>	275
<i>Shock Absorber Replacement</i>	275
<i>Radius Rod Replacement</i>	276
<i>Spring Bracket Replacement</i>	276
Equalizer Replacement	277
Servicing Equalizing Beams	278
Equalizing Beam Bushings	278
<i>Inspect Load Cushions</i>	278
Equalizing Beam Overhaul	278
<i>Preparation for Overhaul Repair</i>	279
<i>Overhaul Procedure</i>	279
<i>Cross Shafts</i>	281
<i>Final Assembly</i>	281
<i>Summary Equalizing Beam Assembly</i>	282
Servicing Air Suspensions	282
Air Suspension Inspection	282
Checking a Ride Height Control Valve	283
Ride Height Adjustment	283
Air Spring Replacement	284
Shock Absorber Replacement	286
Replacing a Height Control Valve	287
Air Circuit Maintenance	287
Suspension Alignment	288
Axle Alignment	288
<i>Laser Alignment</i>	288
<i>Straightedge and Tram Method</i>	289
<i>Axle Adjustments</i>	291
Roll Stability Control	292
Cab Air Suspensions and Driver Seats	292
Retrofitting	293
Cab Suspension Maintenance	293
Driver Seats	293
Ride Analysis	294
Quick Vehicle Checks	294
Test Drive	294
<i>Rough Ride Checklist</i>	294
<i>Summary</i>	296
<i>Review Questions</i>	296

CHAPTER 9	Wheels and Tires	299
	Introduction	300
	Wheels and Rims	300
	Cast Spoke Wheels	300
	Disc Wheels	302
	<i>Stud-Piloted Wheel</i>	302
	<i>Hub-Piloted Wheel</i>	302
	Wide-Base Wheels	302
	Tire to Rim Hardware	303
	Tires	304
	Tire Construction	305
	<i>Body Ply, Breaker, and Belt Materials</i>	305

Tire Size	306
Low-Profile Tires	306
Tire Maintenance	307
Tire Inspection	307
<i>Mechanical Irregularities</i>	307
<i>Load Distribution</i>	308
<i>Other Causes of Tire Wear</i>	308
Tire Rotation and Replacement	309
Tire, Rim, and Wheel Service	309
Tire and Rim Safety	311
Removal from a Vehicle	311
Deflation and Disassembly	312
Rim Inspection	313
Mount Tire to Rim	313
<i>Inflation</i>	313
Spoke Wheel Installation	313
<i>Spoke Wheel Runout</i>	318
Disc Wheel Installation	318
<i>Stud-Piloted Disc Wheels</i>	319
<i>Hub-Piloted Disc Wheels</i>	319
Tube-Type Radial Tires	321
Tubeless-Type Radial Tires	321
Dual Tire Matching	322
<i>Dual Spacing</i>	323
Wheel Balancing	324
<i>Static Balancing</i>	324
Chassis Tire Pressure Management	326
MTIS Operation	326
Wheel Hubs, Bearings, and Seals	327
Tapered Roller Wheel Bearings	329
<i>Roller Bearing Operating Principle</i>	329
Wheel Seals	329
<i>Unitized Seals</i>	329
<i>Lip-Type Seals</i>	329
<i>Brake Drums</i>	329
Front Axle Wheel End Service	329
<i>Cleaning and Inspection</i>	331
<i>Reassembly</i>	331
Wheel Bearing Adjustment	333
TMC Wheel Bearing Adjustment	333
Preset Hub Assemblies	335
Wheel-End Summary	336
Wheel Seal Service	336
Seal Removal and Inspection	337
Installing Wheel Seals	339
<i>Lip-Type Seal Installation</i>	339
Unitized Seal Installation	339
Wheel Seal Failure Consequences	340
Wheel-End Conclusion	341
Dynamic Wheel Balance	341
Out of Balance Wheel Effects	341
Kinetic Wheel Balance	341

Pre-Balance Inspection	342
<i>Kinetic Test Procedure</i>	342
<i>Summary</i>	343
<i>Review Questions</i>	343
CHAPTER 10 Truck and Trailer Frames	347
Introduction	347
Basic Frame Terms	349
Frame Theory	349
How to Calculate RBM	349
<i>SM</i>	350
<i>SM Problems</i>	351
<i>Yield Strength</i>	351
<i>Steel Frames</i>	351
<i>Aluminum Alloy Frames</i>	352
<i>RBM Equation</i>	352
Frame Loading	353
Frame Cutting and Repair Guidelines	353
Frame Construction	353
Frame Damage	356
Frame Damage Categories	357
<i>Diamond</i>	357
<i>Twist</i>	358
<i>Sidesway</i>	358
<i>Sag and Bow</i>	358
<i>Buckling and Mashing</i>	358
Frame Alignment	358
<i>Projecting a Frame Diagram</i>	358
Frame Layout	359
Repair of Frame, Side Rails, and Cross-Members	360
Welding Repairs	361
Bolts and Torque Specifications	364
Drilling	365
After-Market Modifications	366
<i>Bolt Attachments</i>	366
<i>U-Bolt and Clamp Attachment</i>	367
<i>Weld Attachment</i>	367
<i>Summary</i>	368
<i>Review Questions</i>	368
CHAPTER 11 Fifth Wheels and Coupling Systems	373
Introduction	373
Types of Fifth Wheels	374
Semi-Oscillating Fifth Wheels	374
Sliding Fifth Wheels	374
Compensating and Fully Oscillating	375
Specialty Fifth Wheels	376
Fifth Wheel Height and Location	377
Principles of Fifth Wheel Operation	377
Holland Hitch A-Type	377
Holland Hitch B-Type	378
<i>Coupling</i>	378
<i>Release</i>	378

Conmet Fifth Wheels	380
<i>Locking</i>	381
<i>Release</i>	381
Simplex	382
Fontaine No-Slack II Fifth Wheel	382
Fifth Wheel Maintenance	382
Maintenance Interval	382
Maintenance Procedure	382
Holland Fifth Wheel Adjustment	382
<i>A-Type Locking Mechanism</i>	382
<i>B-Type Locking Mechanism</i>	383
<i>Sliding Fifth Wheel Plungers</i>	383
<i>Routine Service Lubrication</i>	384
<i>Lubrication After Cleaning</i>	385
Fifth Wheel Service Tools	385
Coupling	387
Uncoupling	388
Mounting Fifth Wheels	388
Sliding Fifth Wheels	391
Sliding Procedure	391
Sliding Mechanism Inspection and Adjustment	392
Kingpins and Upper Couplers	392
Checking Kingpin Dimensions	394
<i>Kingpin Repair</i>	394
Upper Couplers	394
Pintle Hooks	395
<i>Summary</i>	396
<i>Review Questions</i>	396
 Glossary	 399
 Index	 407