


LEAD-FREE SOLDER PROCESS DEVELOPMENT

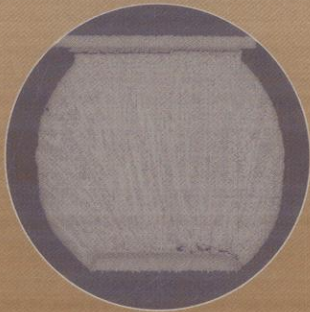

Edited by

GREGORY HENSHALL

JASBIR BATH

CAROL A. HANDWERKER

 WILEY

 **IEEE**
IEEE PRESS

CONTENTS

Technical Reviewers	xi
Preface	xiii
Introduction	xv
Contributors	xix

1 REGULATORY AND VOLUNTARY DRIVERS FOR ENVIRONMENTAL IMPROVEMENT: HAZARDOUS SUBSTANCES, LIFE-CYCLE DESIGN, AND END OF LIFE	1
<i>John Hawley</i>	
1.1 Introduction	1
1.2 Substances of Environmental Concern	2
1.2.1 Hazardous Substances Legislation: EU-RoHS	2
1.2.2 Chemical Substances Legislation: EU-REACH	4
1.2.3 Hazardous Substances Legislation: China-RoHS	6
1.2.4 Hazardous Substances Legislation: Korea-RoHS	7
1.2.5 Hazardous Substances Legislation: United States	7
1.2.6 Hazardous Substances: Material Declarations	8
1.2.7 Hazardous Substances: Voluntary Initiatives	9
1.3 Design for Environment/Energy Efficiency	9
1.3.1 Energy Efficiency: United States Legislation	10
1.3.2 Energy Efficiency: United States Voluntary Program	10
1.3.3 Energy Efficiency: Australia Legislation	10
1.4 Recycling and Take-Back	10
1.4.1 Recycling Legislation: EU-WEEE	11
1.4.2 Recycling Legislation: United States	11
1.4.3 Recycling Legislation: China	12
1.4.4 Other Legislation: EU Packaging and Batteries	12
1.5 Summary	13
References	13

2	LEAD-FREE SURFACE MOUNT TECHNOLOGY	15
	<i>Jasbir Bath, Jennifer Nguyen and Sundar Sethuraman</i>	
2.1	Introduction	15
2.2	No-Clean and Water-Soluble Lead-Free Pastes	15
2.3	Solder Paste Handling	17
2.4	Board and Stencil Design	18
2.5	Screen Printing and Printability of Lead-Free Solder Pastes	21
2.6	Paste Inspection	22
2.7	Component Placement (Paste Tackiness)	23
2.8	Reflow Soldering and the Reflow Profile	25
2.9	Effect of Nitrogen versus Air Atmosphere during Lead-Free Reflow	29
2.10	Head-in-Pillow Component Soldering Defect	31
2.11	Visual Inspection of Solder Joint	35
2.12	Automated Optical Inspection (AOI)	37
2.13	X-ray Inspection	38
2.14	ICT/Functional Testing	38
2.15	Conclusions	39
2.16	Future Work	40
	Acknowledgments	41
	References	41
3	LEAD-FREE WAVE SOLDERING	45
	<i>Denis Barbini and Jasbir Bath</i>	
3.1	Wave-Soldering Process Boundaries	45
3.1.1	Fluxer	46
3.1.2	Function of the Flux in Wave Soldering	47
3.1.3	Flux Chemistries	48
3.1.4	Keeping the Flux on the Board during Soldering	49
3.1.5	Correct Flux Amount	49
3.1.6	Flux Application Methods	50
3.1.7	Preheating	50
3.1.8	Wave Height	51
3.1.9	Wave Contact Length	52
3.1.10	Wave Machine Conveyor Speed	53

3.2	Soldering Temperatures on the Chip and Main Soldering Waves	53
3.2.1	Wetting during Wave Soldering and Wave Capillary Action	56
3.3	Alloys for Lead-Free Wave Soldering	57
3.4	Function of Nitrogen in Wave Soldering	58
3.5	Effect of PCB Design on Wave Solder Joint Formation	61
3.5.1	Solder Bridging	61
3.5.2	Large Fillet Formation	62
3.5.3	Lead-Free Wave Hole-Fill	62
3.5.4	Open/Skipped Solder Joints	66
3.5.5	Solder Balls	66
3.6	Standards Related to Wave Soldering	67
3.7	Conclusions	67
3.8	Future Work	68
	Acknowledgments	68
	References	68

4 LEAD-FREE REWORK 71

Alan Donaldson

4.1	Introduction	71
4.2	Surface Mount Technology (SMT) Hand Soldering/Touch-Up	72
4.2.1	Passive Component Rework	72
4.2.2	QFP/Gull Wing Rework	72
4.2.3	ECO Wiring	75
4.2.4	Lead-Free Solder Pad Repair	76
4.3	BGA/CSP Rework	76
4.4	BGA Socket Rework	84
4.5	X-raying	86
4.6	Through-Hole Hand-Soldering Rework	86
4.7	Through-Hole Mini-Pot/Solder Fountain Rework	87
4.7.1	Board Preparation	87
4.7.2	Component Removal	88
4.7.3	Component Replacement	89
4.8	Best Practices and Rework Equipment Calibrations	91
4.9	Conclusions	91
4.10	Future Work	92
	References	92

5	LEAD-FREE ALLOYS FOR BGA/CSP COMPONENTS	95
	<i>Gregory Henshall</i>	
5.1	Introduction	95
5.1.1	Issues with Near-Eutectic SnAgCu Alloys	95
5.2	Overview of New Lead-Free Alloys	97
5.2.1	Range of New Lead-Free Alloys	98
5.2.2	Alloys in Current Use for Area Array Packaging	99
5.3	Benefits of New Alloys for BGAs and CSPs	101
5.3.1	Mechanical Shock Resistance	101
5.3.2	Resistance to Bend/Flex Loading	106
5.4	Technical Concerns	107
5.4.1	Surface Mount Assembly	107
5.4.2	Thermal Fatigue Resistance	110
5.5	Management of New Alloys	112
5.5.1	Overview of Concerns	112
5.5.2	Assessment of New Alloys for Acceptability	113
5.5.3	Updating Industry Standards	114
5.5.4	Industry Activities	116
5.6	Future Work	117
5.7	Summary and Conclusions	119
	Acknowledgments	120
	References	121
6	GROWTH MECHANISMS AND MITIGATION STRATEGIES OF TIN WHISKER GROWTH	125
	<i>Peng Su</i>	
6.1	Introduction	125
6.2	Role of Stress in Whisker Growth	127
6.3	Understanding Standard Acceleration Tests	134
6.3.1	Air-to-Air Thermal Cycling (AATC)	135
6.3.2	Low-Temperature/Low-Humidity Storage	135
6.3.3	High-Temperature/High-Humidity Storage	137
6.4	Plating Process Optimization and Other Mitigation Strategies	139
6.4.1	Electrolyte and Plating Process	139
6.4.2	Underplate and Heat Treatment	141
6.5	Whisker Growth on Board-Mounted Components	142
6.6	Summary	148
	References	149

7 TESTABILITY OF LEAD-FREE PRINTED CIRCUIT ASSEMBLIES 151
Rosa D. Reinoso and Aileen M. Allen

- 7.1 Introduction 151
- 7.2 Contact Repeatability of Lead-Free Boards 151
 - 7.2.1 Probeability Methodology 156
 - 7.2.2 SMT Target Results 159
 - 7.2.3 Through-Hole Test Target Results 161
 - 7.2.4 Trends and Solutions 165
- 7.3 Probe Wear and Contamination 166
- 7.4 Board Flexure 167
- 7.5 Conclusions 171
 - Acknowledgments 171
 - References 172

8 BOARD-LEVEL SOLDER JOINT RELIABILITY OF HIGH-PERFORMANCE COMPUTERS UNDER MECHANICAL LOADING 173
Keith Newman

- 8.1 Introduction 173
- 8.2 Establishing PWB Strain Limits for Manufacturing 174
- 8.3 SMT Component Fracture Strength Characterization 177
 - 8.3.1 Bend 177
 - 8.3.2 Drop 178
 - 8.3.3 High-Speed Solder Ball Shear/Pull 180
 - 8.3.4 Other Test Method Examples 185
- 8.4 PWB Fracture Strength Characterization 186
- 8.5 PWB Strain Characterization 187
 - 8.5.1 Board Assembly and Test 187
 - 8.5.2 Optical Methods 189
 - 8.5.3 Unpackaged and Packaged Drop 189
- 8.6 Solder Joint Fracture Prediction—Modeling 191
- 8.7 Fracture Strength Optimization 194
 - 8.7.1 Surface Finish 194
 - 8.7.2 Solder Alloy 196
 - 8.7.3 PWB Laminate 198
 - 8.7.4 Thermal Exposure 198
 - 8.7.5 Epoxy Reinforcement 200
- 8.8 Conclusions 200
 - Acknowledgments 202

Note	202
References	202
9 LEAD-FREE RELIABILITY IN AEROSPACE/MILITARY ENVIRONMENTS	205
<i>Thomas A. Woodrow and Jasbir Bath</i>	
9.1 Introduction	205
9.2 Aerospace/Military Consortia	206
9.2.1 Executive Lead-Free Integrated Process Team (ELF IPT)	206
9.2.2 Pb-Free Electronics Risk Management (PERM) Council	206
9.2.3 Tin Whisker Alert Group	208
9.2.4 Center for Advanced Life-Cycle Engineering (CALCE)	208
9.2.5 Joint Council on Aging Aircraft/Joint Group on Pollution Prevention (JCAA/JG-PP) Lead-Free Solder Project	209
9.2.6 NASA/DoD Lead-Free Electronics Project	210
9.2.7 Crane/SAIC Repair Project	211
9.3 Lead-Free Control Plans for Aerospace/Military Electronics	211
9.4 Aerospace/Military Lead-Free Reliability Concerns	212
9.4.1 Thermal Fatigue Resistance	212
9.4.2 Vibration Fatigue Resistance	215
9.4.3 Mechanical Shock Resistance	235
9.4.4 Tin Whiskers and Tin Pest	236
9.5 Summary and Conclusions	239
References	240
10 LEAD-FREE RELIABILITY IN AUTOMOTIVE ENVIRONMENTS	243
<i>Richard D. Parker</i>	
10.1 Introduction to Electronics in Automotive Environments	243
10.2 Performance Risks and Issues	245
10.3 Legislation Driving Lead-Free Automotive Electronics	246
10.4 Reliability Requirements for Automotive Environments	247
10.5 Failure Modes of Lead-Free Joints	248
10.6 Impact to Lead-Free Component Procurement and Management	250
10.7 Change versus Risks	251
10.8 Summary and Conclusions	253
References	254
Index	255