


Guide to the Use of the Wind Load Provisions of ASCE 7-02

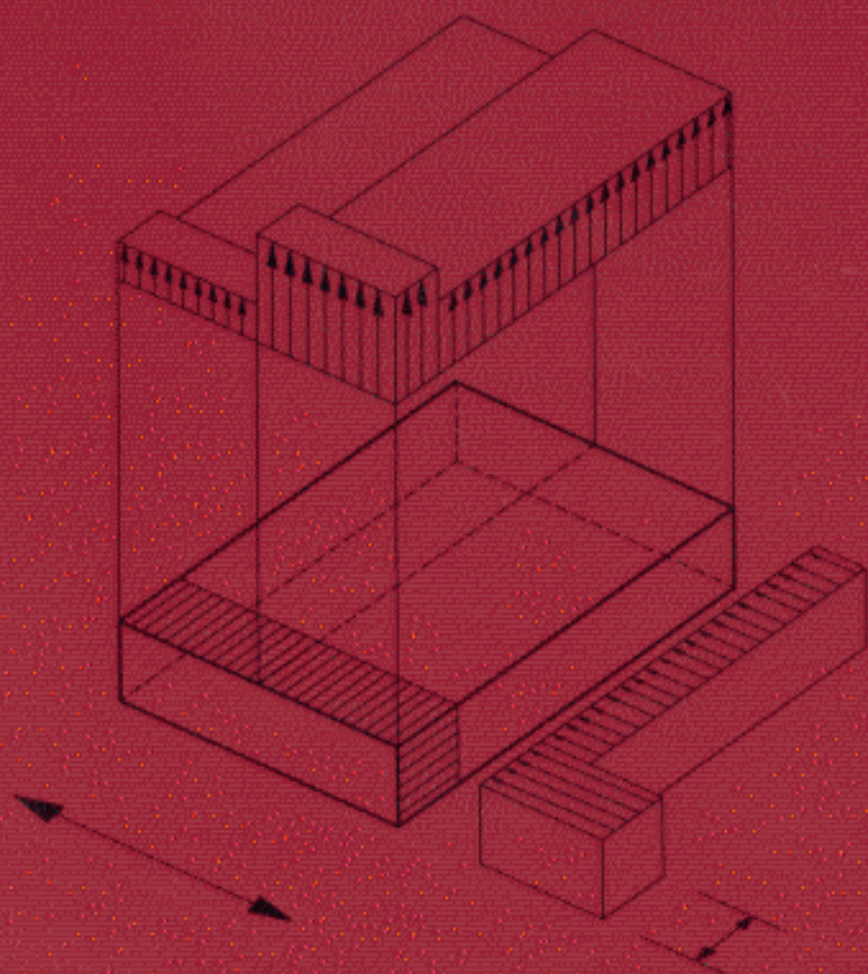

Kishor C. Mehta and James M. Delahay

ASCE
PRESS

Contents

List of Figures	vii
List of Tables	ix
Preface	xiii
Acknowledgments	xiii
1. Introduction	1
1.1 Objective of the Guide	2
1.2 Significant Changes	2
1.3 Limitations of Standard	3
1.4 Technical Literature	4
2. Wind Load Provisions	6
2.1 Format	6
2.2 Design Procedures	6
2.3 Method 3, Wind Tunnel Procedure	10
2.4 Equations for Graphs	10
3. Examples	17
3.1 Example 1: 30-ft × 60-ft × 15-ft Commercial Building with Concrete Masonry Unit Walls	18
3.2 Example 2: Ex. 1 Using Simplified Procedure	24
3.3 Example 3: 100-ft × 200-ft × 160-ft-High Office Building	26
3.4 Example 4: Office Building of Ex. 3 Located on an Escarpment	37
3.5 Example 5: 2,500-ft ² House with Gable/Hip Roof	39
3.6 Example 6: 200-ft × 250-ft Gable Roof Commercial/Warehouse Building Using Buildings of All Height Provisions	47
3.7 Example 7: Building of Ex. 6 Using Low-Rise Building Provisions	59
3.8 Example 8: 40-ft × 80-ft Commercial Building with Monoslope Roof with Overhang	66
3.9 Example 9: U-Shaped Apartment Building	78
3.10 Example 10: 50-ft × 20-ft Billboard Sign on Poles (Flexible) 60 ft Above Ground	88
3.11 Example 11: Domed Roof Building	93
3.12 Example 12: Unusually Shaped Building	100
4. Frequently Asked Questions	110
References	119
Index	123